




Aluminum tube cuts through rubber foot

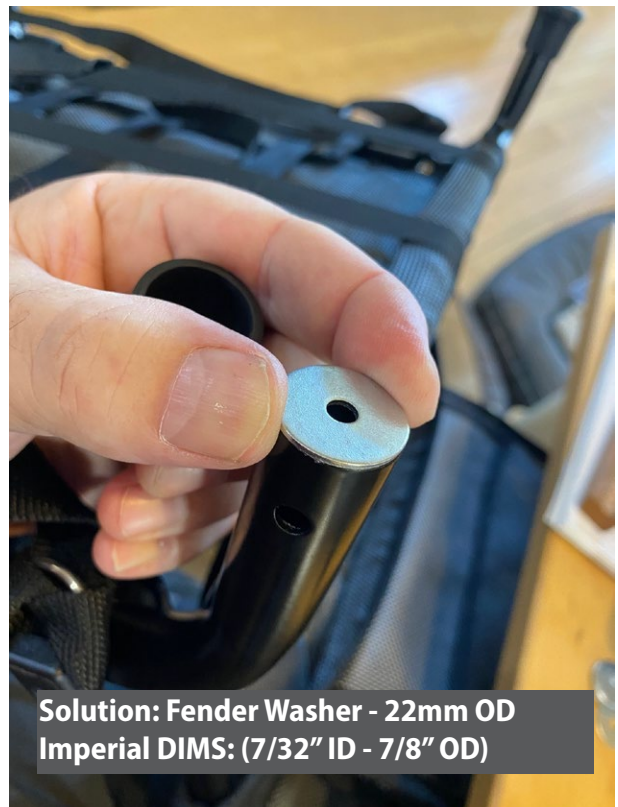

Solution: Fender Washer - 22mm OD
Imperial DIMS: (7/32" ID - 7/8" OD)



Insert washer into rubber foot

4pcs
(insert
washers)



4pcs
(inserted)



Fender Washer - 22mm OD
Imperial DIMS: (7/32" ID - 7/8" OD)